



Quickstart Guide: Candy Corn

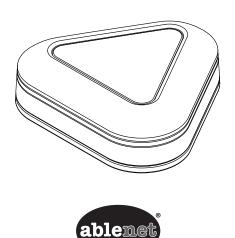

www.ablenetinc.com

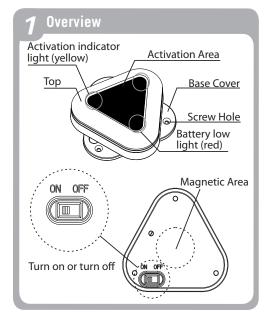

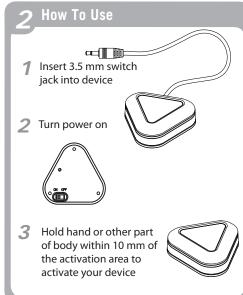

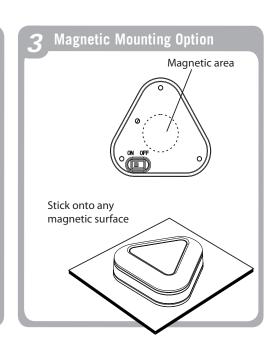



1 Hold top and turn base clockwise

2 Insert screws into holes and tighten

3 Turn top counter-clockwise to hide screws

